


Lever Handles And Roses

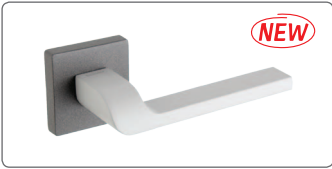


high quality lever handles

NL802-H	LR4	NL-K	LR12
NL803-L	LR4	NL-L	LR12
NL804-K	LR4	NL-M	LR12
NL805-H	LR4	NL-N	LR12
NL806-C	LR5	NL-P	LR12
NL807-P	LR5	NL-Q	LR12
NL808-M	LR5	NL Escutcheon	LR13
NL809-A	LR5	NL-AE	LR13
NL810-N	LR6	NL-CE	LR13
NL811-Q	LR6	NL-HE	LR13
NL812-M	LR6	NL-JE	LR13
NL813-N	LR7	NL-KE	LR13
NL814-A	LR7	NL-LE	LR13
NL815-C	LR7	NL-ME	LR13
NL816-H	LR7	NL-NE	LR13
NL817-H	LR8	NL-PE	LR13
NL818-A	LR8	NL-QE	LR13
NL819-C	LR8	NL Roses Dimensions	LR14
NL820-H	LR9	5 Series Rose & Cylinder Escutcheon for Set	LR15
NL821-K	LR9	5 Series Bracket	LR16
NL822-C	LR9	5 Series Dimensions	LR17
NL823-C	LR9	5-A	LR17
NL Series Dimensions	LR10-11	5-AE	LR17
NL Roses	LR12	5-H	LR17
NL-A	LR12	5-HE	LR17
NL-C	LR12	How to Order	LR18
NL-H	LR12	Installation Instructions	LR19-21
NL-J	LR12	Information	LR22-23



NL Series

LR4-11

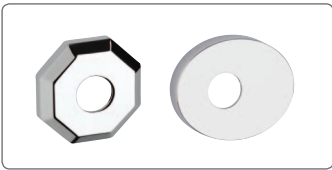

Roses

LR12 & LR 14



Escutcheon

LR13




5 Series

LR15-17

Lever Set	Latch	Cylinder	Finish	Door Thickness (D/T)
NL802-SH-SHE	4650-60	46225-D	F21 Bright Chrome	50 50mm


How to Order

LR18

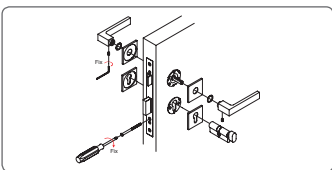

Installation Instructions

LR19-21

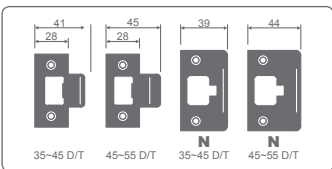

Information

LR22-23

NL SERIES

Standard Finishes:

F21, F22, F91, F93,
F94, F96, F97, C02


NL802-H

F21 Bright Chrome



NL803-L

F21 Bright Chrome

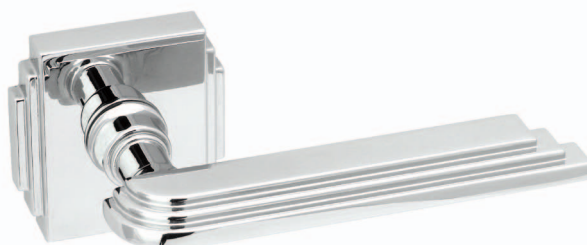

NL804-K

F22 Stain Nickel



NL805-H

F91 Matt Black powder coating



NL806-C

F93 Matt White powder coating



NL807-P

F97 Matt Brown powder coating



NL808-M

F21 Bright Chrome



NL809-A

F97 Matt Brown powder coating



NL SERIES

Standard Finishes:

F21, F22, F91, F93,
F94, F96, F97, C02


NL810-N

F22 Satin Nickel



NL811-Q

F21 Bright Chrome

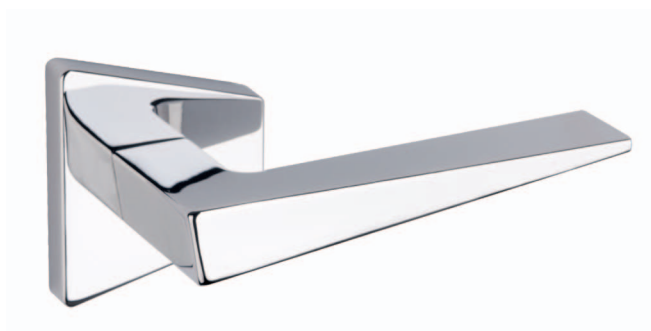

NL812-M

F96 Matt D • Grey powder coating



NL813-N

F21 Bright Chrome



NL814-A

F94 Matt L • Grey powder coating




NL815-C

F91 Matt Black powder coating



NL816-H

F21 Bright Chrome

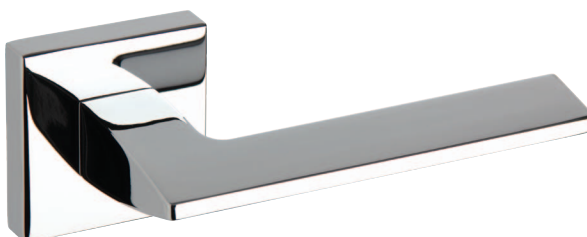


NL SERIES

Standard Finishes:

F21, F22, F91, F93,
F94, F96, F97, C02


NL817-H

C02

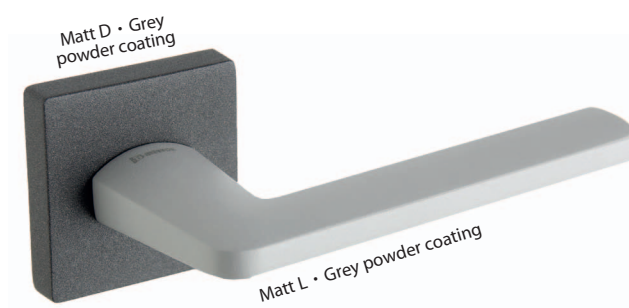

NL818-A

F22 Satin Nickel

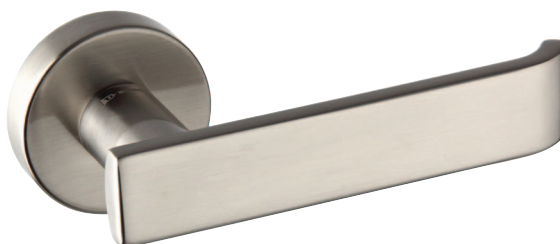

NL819-C

F97 Matt Brown powder coating



NL820-H

F22 Satin Nickel



NL821-K

F21 Bright Chrome



NL822-C

F21 Bright Chrome



NL823-C

C02

NEW


Matt D • Grey
powder coating




Matt L • Grey powder coating

NL SERIES


Dimensions
in millimeters

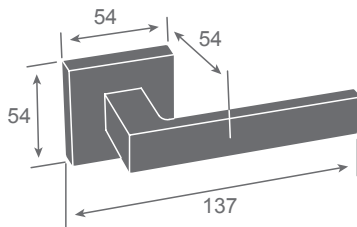


NL802-H

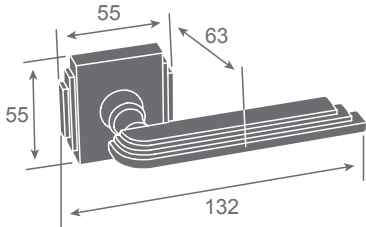


NL803-L

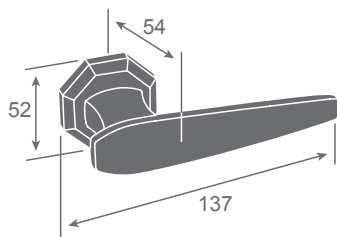


NL804-K

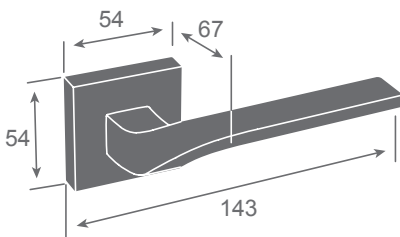


NL805-H

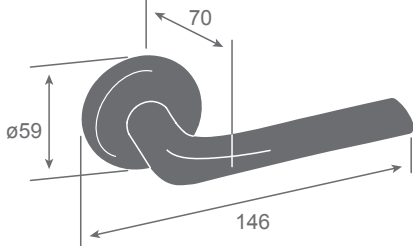


NL806-C

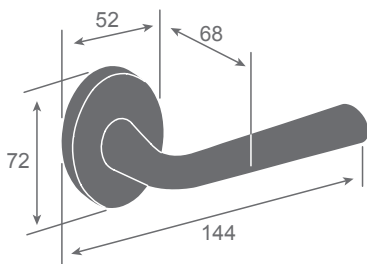


NL807-P

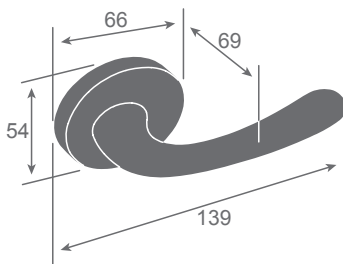


NL808-M

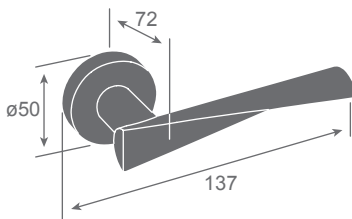


NL809-A

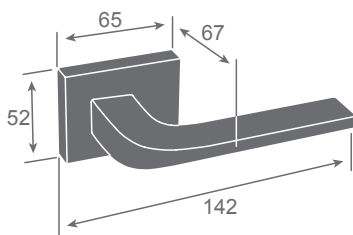


NL810-N

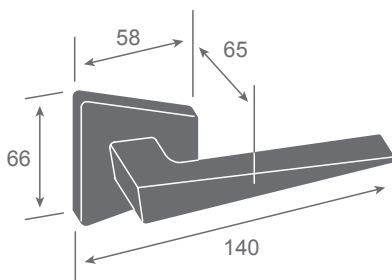


NL811-Q

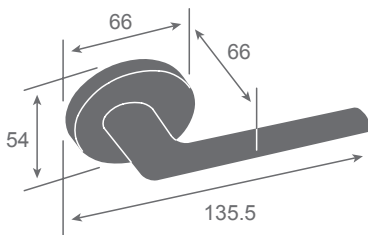


NL812-M

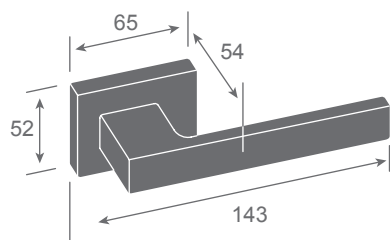


NL813-N

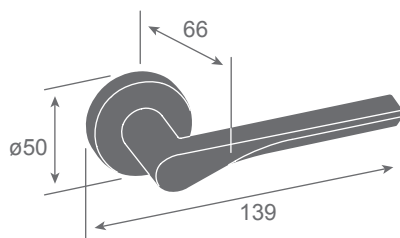


NL814-A

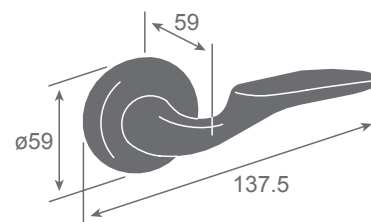


NL815-C

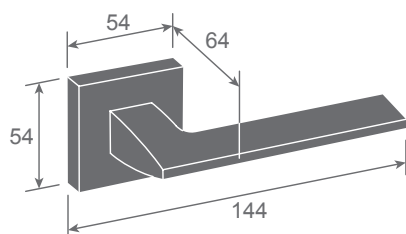


NL816-H

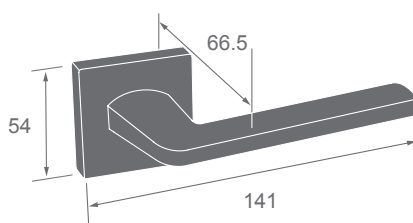


NL817-H

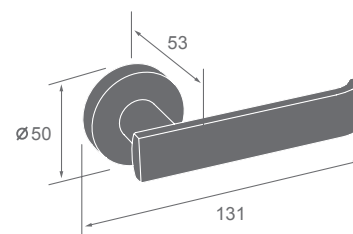


NL818-A

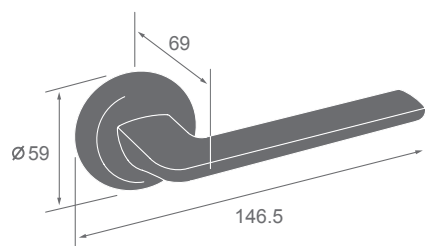


NL819-C

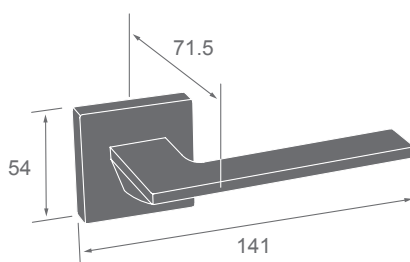


NL820-H

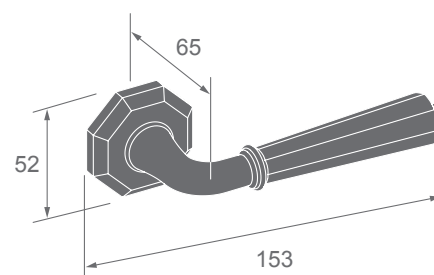

NL821-K

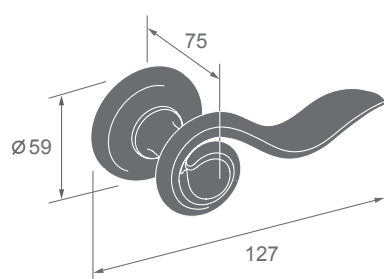

NL822-C

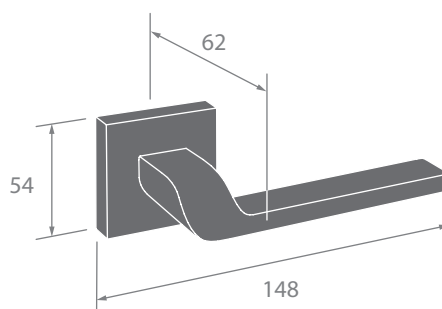

NL823-H

NL ROSE

The trim design to be
chosen from Rose design
A - Q



Cassette Component

A



C




H



J



K

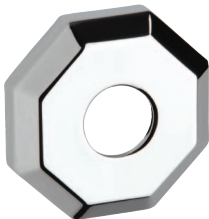

L



M




N



P



Q

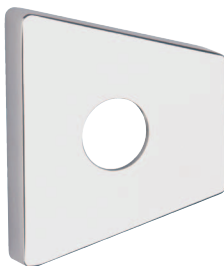

NL ESCUTCHEON

Cylinder Escutcheon

The trim design to be chosen from Rose design
AE - QE

AE



CE



HE



JE



KE



LE



ME



NE



PE




QE




NL ROSE


Dimensions
in millimeters

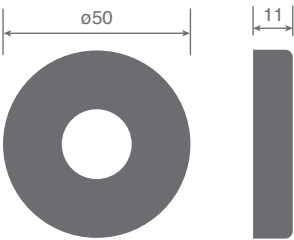


A

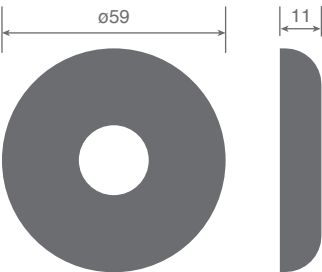


C

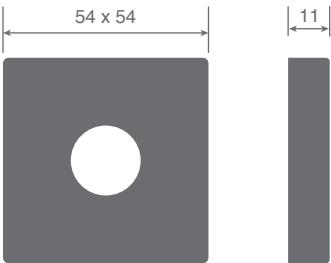


H

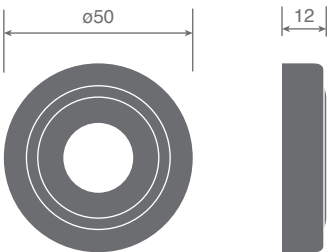


J

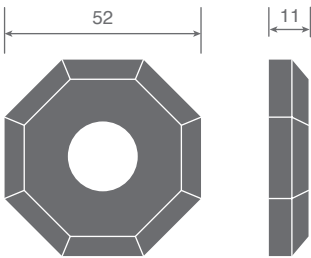


K

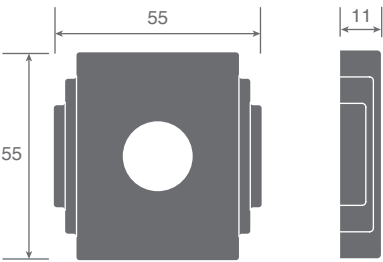


L

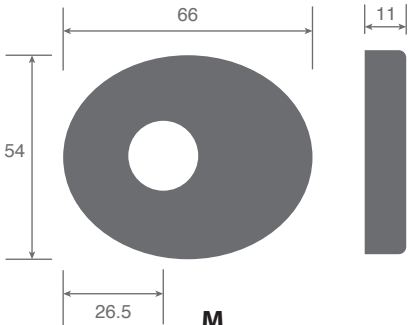


M

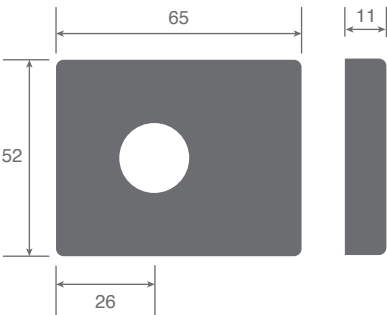

N

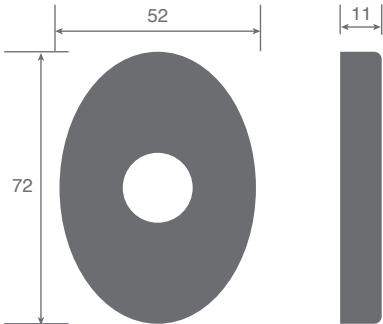

P

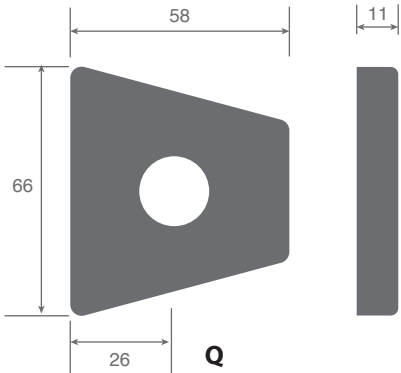


Q

5 SERIES

Rose & Cylinder
Escutcheon

Example for set

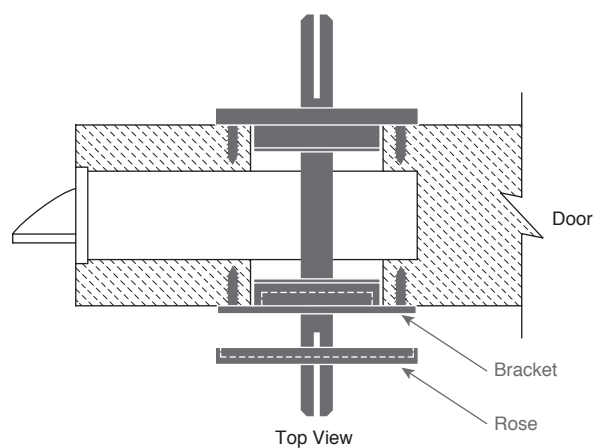

outside



inside



outside



inside

5 SERIES

Rose & Cylinder
Escutcheon

Rose design A & H

Bracket



Rose Bracket



Cylinder Escutcheon Bracket

5-A

Rose Cover



5-AE

Cylinder Escutcheon Cover



5-H

Rose Cover



5-HE



Cylinder Escutcheon Cover




5 SERIES

Dimensions
in millimeters


Bracket

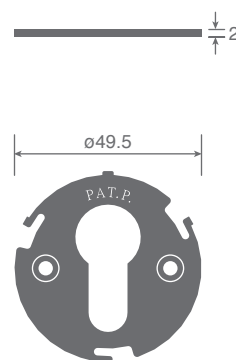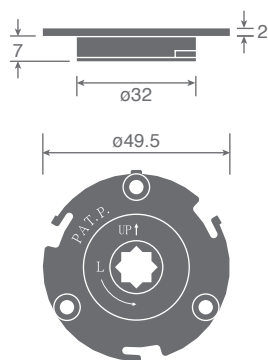

Rose

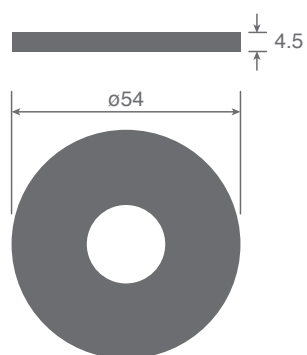


5-A

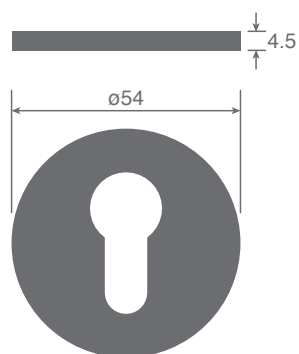


5-AE

Cylinder Escutcheon

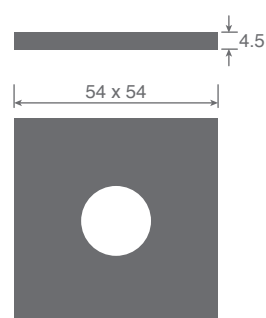



5-H

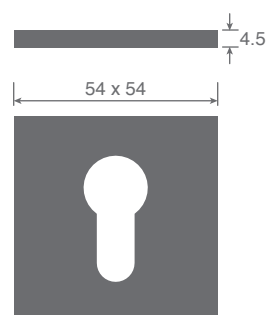

5-HE

How to order

EXAMPLE (1): NL802-5H-5HE-4650-60-4622S-D-F21-50DT

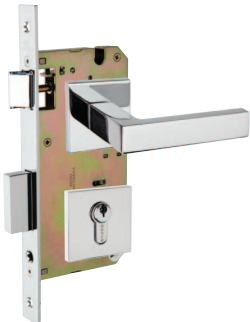	Lever Set	Latch	Cylinder	Finish	Door Thickness (D/T)
	NL802-5H-5HE	4650-60	4622S-D	F21	50
				Bright Chrome	50mm

EXAMPLE (2): NL808-M-5091R-60-F21-45DT

	Lever Set	Latch	Backset	Finish	Door Thickness (D/T)
	NL808-M	5091R	60	F21	45
			60mm	Bright Chrome	45mm

EXAMPLE (3): NL807-P-CLQ-05-F22-50DT

	Lever Set	Lock	Function Number	Finish	Door Thickness (D/T)
	NL807-P	CLQ	05	F22	50
			Entrance	Satin Nickel	50mm


EXAMPLE (4): NL805-H-HE-4626-70-4622S-A-F21-55DT

	Lever Set	Lock	Cylinder	Finish	Door Thickness (D/T)
	NL805-H-HE	4626-70	4622S-A	F21	55
				Bright Chrome	55mm


Installation Instruction

For Example (1)


1

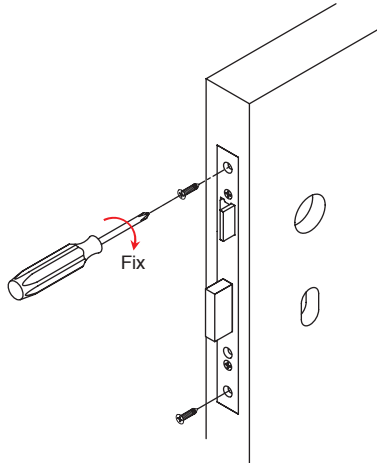


2

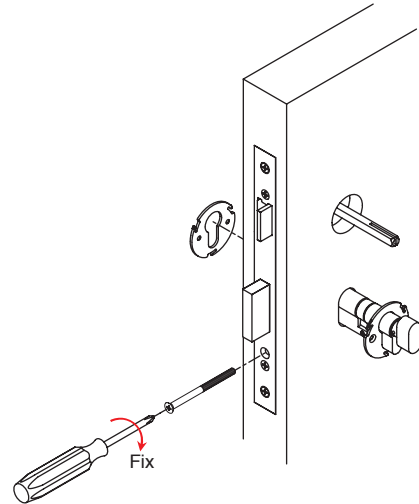


3

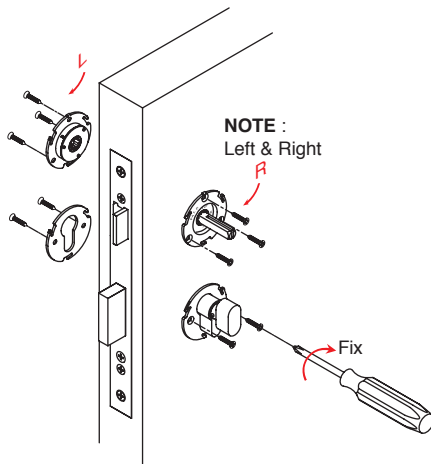

4

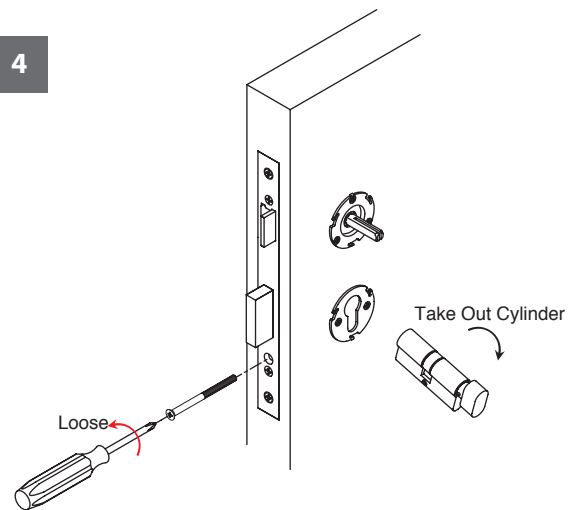


5

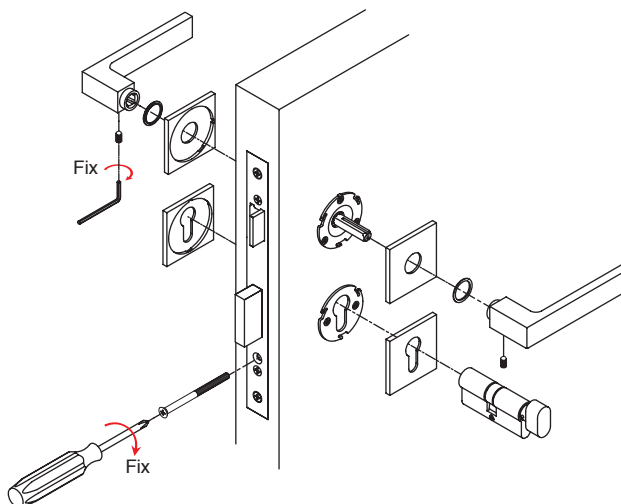

Installation Instruction


For Example (3)

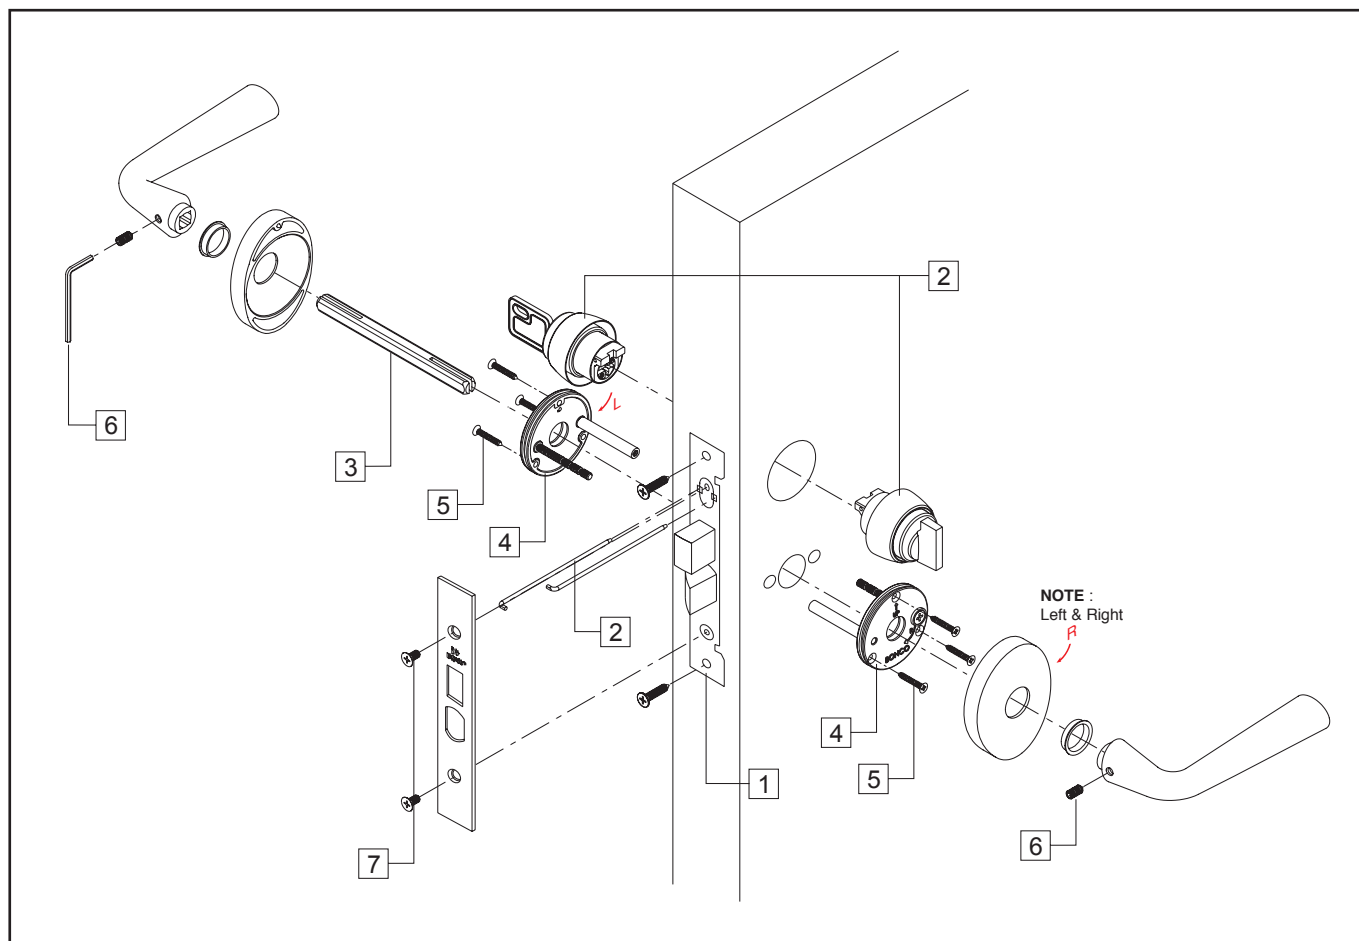

1. Install the lockcase by inserting it into the cutout of the door.
2. Secure the outside cylinder and inside turn-piece to the lockcase by inserting the long retainer pins from the plate side.
3. Insert the square spindle into the hub.
4. Place the fixing brackets onto the door and fix them by tightening up two sets of (male and female screws) as shown in the diagram.
5. Reinforce and secure the fixing brackets by additional screws.
6. Secure the outside and inside lever to the fixing brackets. Tighten the levers to the square spindle with the little thread screw.
7. Finally, install the armored front.

Installation Instruction





For Example (4)

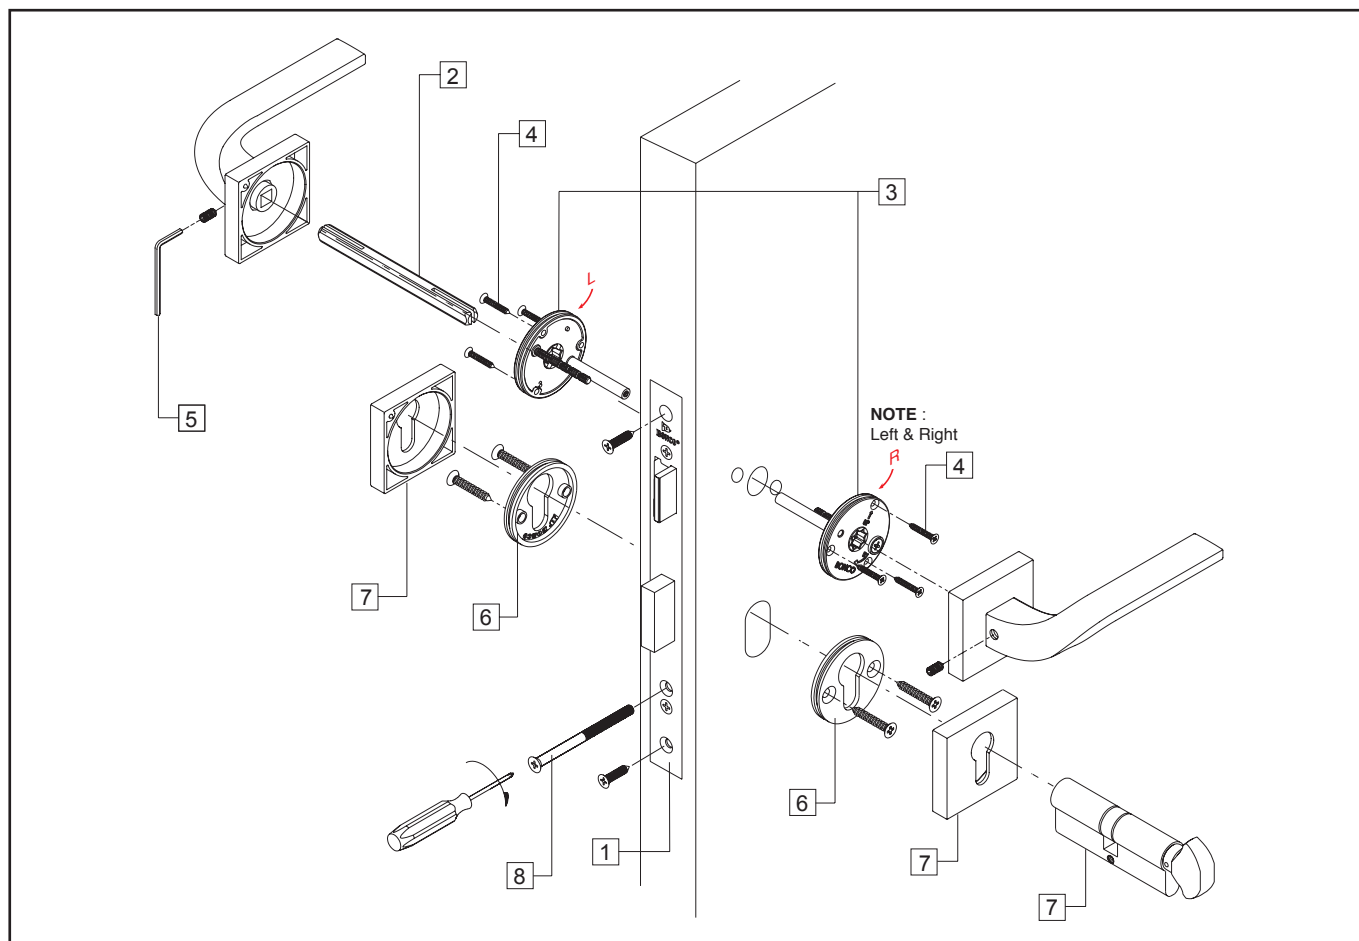


1. Install the lockcase by inserting it into the cutout of the door.
2. Insert the square spindle into the hub.
3. Place the fixing brackets onto the door and fix them by tightening up two sets of screws.
4. Reinforce and secure the fixing brackets by additional screws.
5. Secure the outside and inside lever to the fixing brackets. Tighten the levers to the square spindle with the little thread screw.
6. Place the fixing brackets onto the door and fix them by tightening up four screws.
7. Insert the cylinder through the cylinder escutcheons.
8. Finally, install the armored front.

Information

The Series below are recommended to use with **BONCO** lever handles and rose.

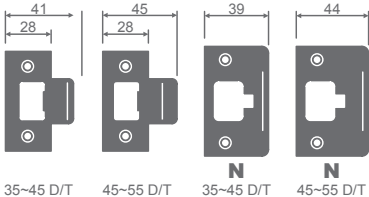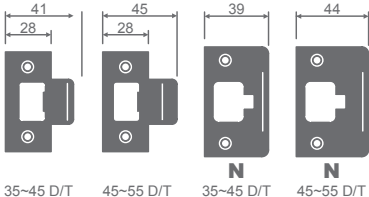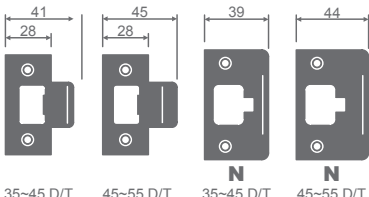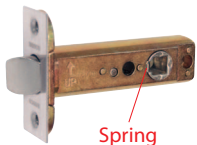Series	Backset	Door Thickness	Strike Plate	Photo	Splindle
5091SS or 5091SSN Spring Latch	60&70 mm	35~55mm	 35~45 D/T 45~55 D/T 35~45 D/T 45~55 D/T	 Latch: Stainless Steel, Reversible Face & Strike Plate: Stainless Steel	AA
5091E or 5091EN Spring Latch	60&70 mm	35~55mm	 35~45 D/T 45~55 D/T 35~45 D/T 45~55 D/T	 Latch: Zinc Alloy, Reversible Face & Strike Plate: Stainless Steel	AA
5091R or 5091RN Spring Latch with Spring Hub	60&70mm	35~55mm	 35~45 D/T 45~55 D/T 35~45 D/T 45~55 D/T	 Latch: Stainless Steel, Reversible Face & Strike Plate: Stainless Steel	AA
LL Series	50mm	40~50mm			AA

Series	Backset	Door Thickness	Strike Plate	Photo	Splindle
CL Series	50mm	45~55 mm			AA
CLQ Series	70 mm	45~55 mm			AA
4626 Series	60&70mm	35~55mm	  35~45 D/T 45~55 D/T		AA
4650 Series	60&70mm	35~55mm	  35~45 D/T 45~55 D/T		AA
4653 Series	60&70mm	35~55mm	  35~45 D/T 45~55 D/T		AR



Name of quality & dependability

www.boncohardware.com

BONCO Ironmongery Ltd.
Member of E. Bon Holdings Ltd. (HKEx stock code 599)

18/F, First Commercial Building, 33 Leighton Rd., Causeway Bay, H.K.
Tel : (852) 2891 2188 Fax : (852) 2834 2652

